

Coolant pressure sensor or pressure switch

1. Using coolant recovery equipment (for HFC134a) remove coolant.
2. Remove the front grille.
3. Remove the coolant pressure sensor or pressure switch.

Caution : Be sure to replace the O ring on the coolant pressure sensor or pressure switch with a new one and apply compressor oil.

Coolant pressure sensor or pressure switch
tightening torque (N-m {kg-m}) : 9.8-12{1.0-1.2}

